


NCM Power/Fuse Indicator

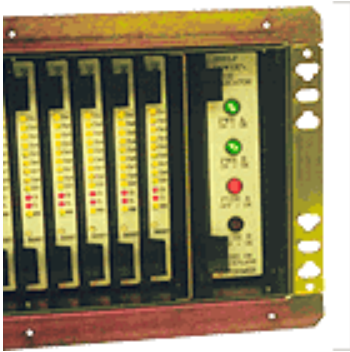

DESCRIPTION

The NCM Power/Fuse Indicator Card is designed to alert users of the NCM 19 slot and 6 slot racks that one or both of the power sources to the NCM rack backplane has failed, and/or that one or both of fuses on the NCM rack backplane has tripped.

APPLICATIONS

The NCM Power/Fuse Indicator Card will give a visual indication that power to the NCM rack backplane has failed or a fuse has tripped. The NCM racks are equipped with redundant power supplies and both sources are also fused.

FEATURES

- Four bright 10 mm. LEDs, green LEDs for power A and power B, red LEDs for fuse A and fuse B.
- When the NCM rack is receiving power the green LEDs will be lit and will extinguish when power is off.
- When the NCM rack is receiving correct voltage the red LEDs will be unlit and will light up when a fuse has tripped.
- LED status explanations are on the card face plate and the card itself.

SPECIFICATIONS

- Standard WSCM 400 size card
- Dimensions (H x W x D): 5 9/16" x 1 1/4" x 5 3/8"